
ETON

WALL MOUNTED BATH SHOWER MIXER TAP

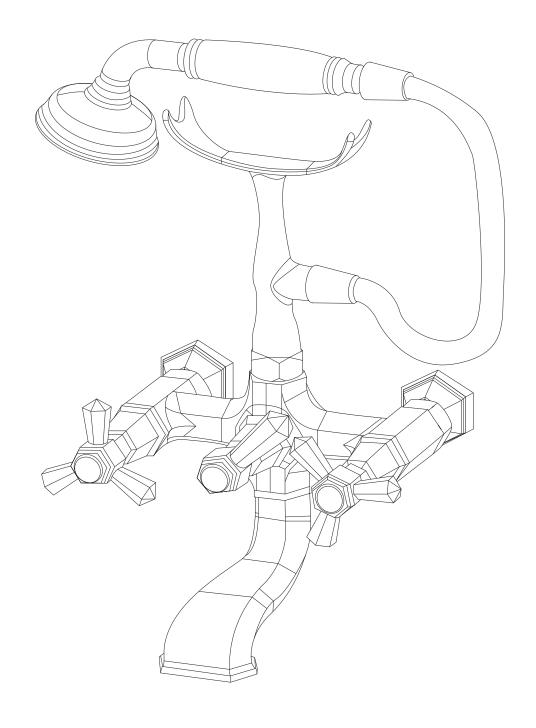

EN
INSTALLATION
AND CARE GUIDE

Please retain for future reference

LUSSO

INTRODUCTION

Thank you for purchasing the Eton Wall Mounted Bath Shower Mixer Tap.

Please read this guide carefully before installing, using and cleaning this product, and retain it for future reference. Please also note that this mixer tap has been fully tested before being dispatched, which may mean there is water residue on some of the parts.

If you have any queries in relation to this product or guide, please contact our Customer Service team on 020 3370 4057.

PRODUCT KIT

A Bath Mixer

B Handset


C 1.5m Handset Hose

D Cranked Legs (x2)

E Escutcheons (x2)

F Seal Gaskets (x2)

G Aerator Key

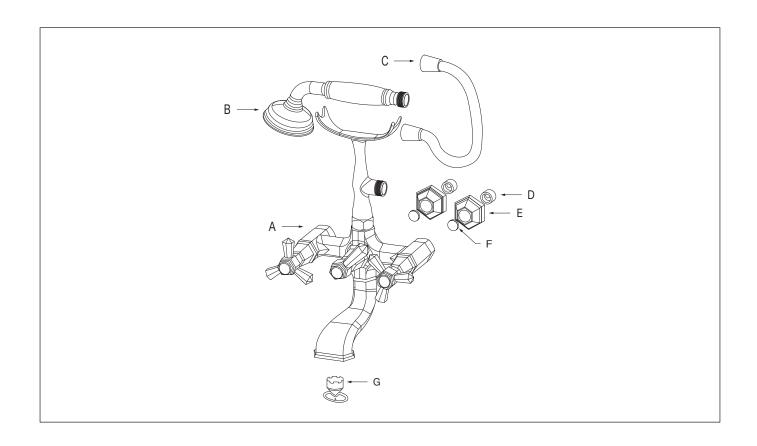


INSTALLATION STEPS

Before installation, please note that this tap is designed for wall mounting only, and we recommend that it is installed by a fully qualified plumber.

It is suitable for use on all boiler systems including pumped, gravity and combination boilers to a maximum pressure of 5 bar - pressure above this may require the fitting of reducer valves.

Please also note that failure to flush your plumbing system as part of the installation process will void the product guarantee. In addition, you must fully test the product before tiling and/or plastering, etc as Lusso will not be held responsible for any costs involved in the removal of the tap if you find there is a fault.

- 1 Carefully check the dimension drawing and mark the position for the tap.
- 2 Connect the cranked legs to the hot and cold water feeds using PTFE tape.
- 3 Screw the escutcheons and bath mixer into place.
- 4 After checking for leaks, connect the shower hose and handset.

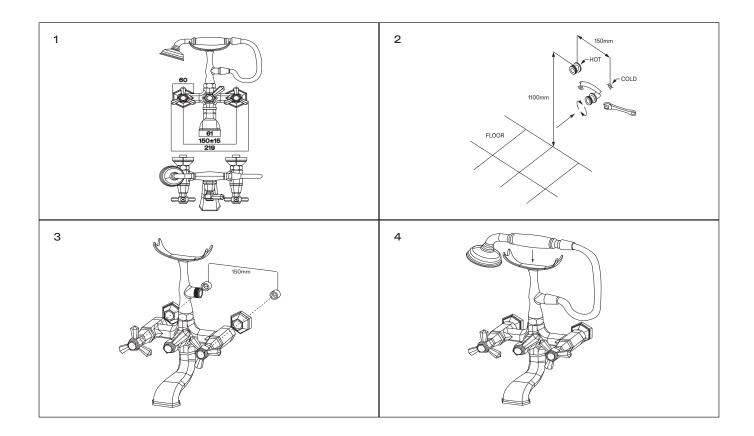

CARE INSTRUCTIONS

To clean and maintain the flawless finish of this product, please follow the below instructions. Improper maintenance will void your product guarantee.

- ✓ Clean with a damp cloth.
- X Do not use acidic cleansers.
- X Do not use abrasive cleansers or cloths.

Go to Lusso.com to activate your guarantee.

TROUBLESHOOTING

Why is the tap producing hot water when cold is selected, and vice versa? It's likely that the hot and cold pipes have not been connected the right way around - please check and amend.

There is a leak from the top of the tap handle - what should I do?

In this instance, it's likely that the cartridge has become loose and needs to be reinstalled. To do this, unscrew and remove the decorative cap from the handle by hand, then use a screwdriver to remove the internal fixing screw. Next, unscrew and remove the dome shaped part by hand, and use an adjustable spanner to tighten the cartridge nut to create a seal and stop the leak. Once complete, reassemble the tap.

What could cause a fluctuating flow rate or low/no flow from the valve?

This may be due to either a blockage in the system, incorrect operating conditions, or a clog in the aerator. To unclog the aerator, simply unscrew it, rinse it with water, and reinstall it - if the problem persists, please consult with a qualified plumber.

LUSSO

Customer Care: 020 3370 4057 International: +44 20 3370 4057