



Shower Door Installation Instruction

Tools Required

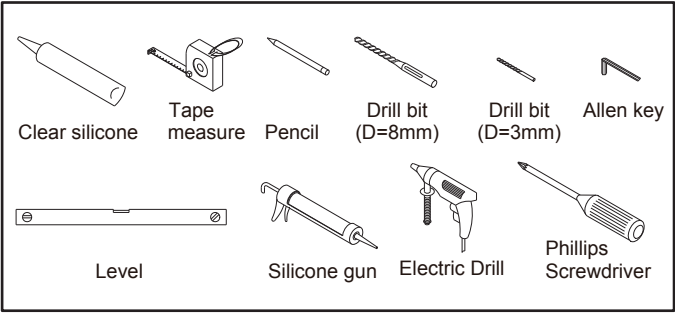

Shower Door Components

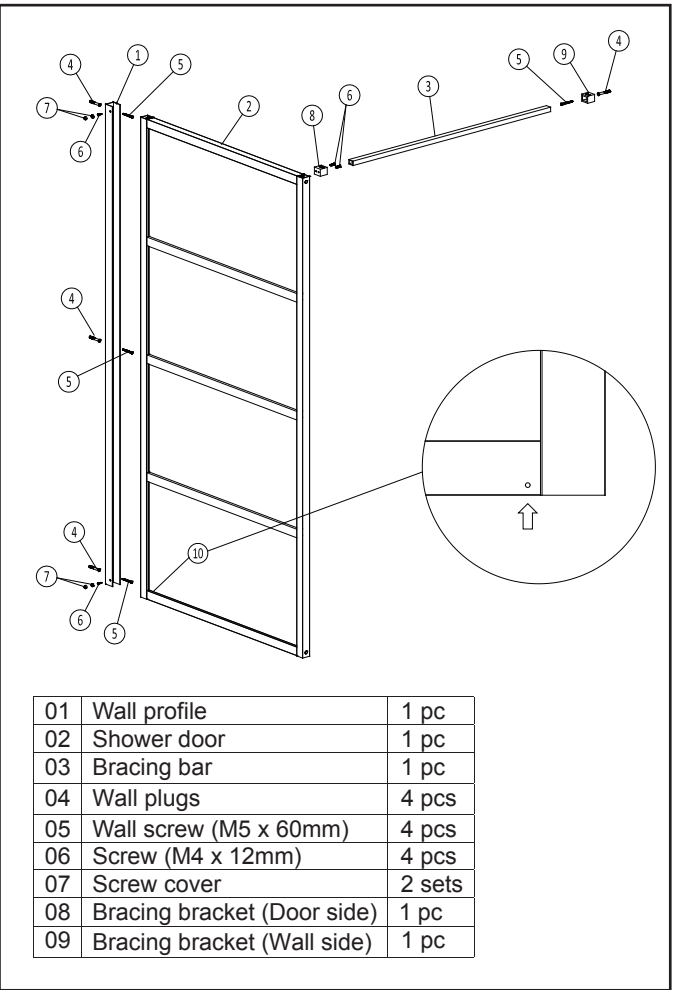

Installation Steps

1. Locate the **Wall Profile(01)** and place it vertically against the wall.
Adjust the profile using a level. Use predrilled holes in the profile to mark holes for drilling.
Now drill the holes in the wall and insert the **Wall Plugs(04)**.
2. Run a fine line of clear silicone down the centre of the back of the wall profile to create a watertight seal.
3. Attach the wall profile to the wall using **Wall Screws (05)**.
4. Put the shower screen into the **Wall profile (01)** and fix it in place by screwing through the wall profile and into the shower screen from the inside of the shower.
Screw the **Screw covers (07)** into the heads of the screws.
5. Attach the **Bracing bracket (08)** to the top profile of the shower screen using **Screws (06)**.
6. Attach the **Bracing bracket (09)** to the wall with the **Wall plugs (04)** and **Wall screws (05)**.
7. Insert the **Bracing bar (03)** into both bracing brackets and tighten the grub screws in both brackets to hold the bracing bar securely.
8. Run a fine line of clear silicone on the outside of the shower between the screen and shower tray to create a watertight seal.
9. Drill a **Hole (10)** on the inside bottom profile (3mm).

